




MORTISE LOCK INSTALLATION INSTRUCTIONS

INSPIRE[™] ROSELESS DESIGNER TRIM

FM 340 Rev. 2/11

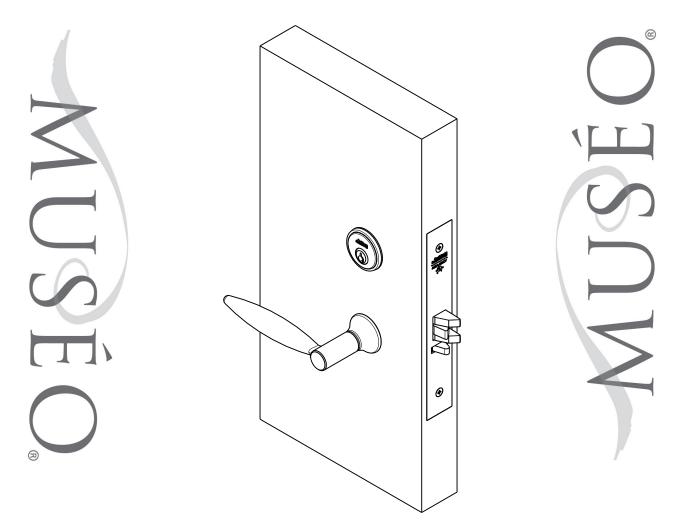

INSPIRE[™] Mortise Trim Instructions FM 340 Rev. 2/11

TABLE OF CONTENTS:

DOOR PREPARATION	1
ML2000 LOCK HANDING	2
FULL WORKING TRIM (STD)	3
HALF WORKING TRIM (M30)	6
FULL DUMMY TRIM (ML2070)	8
HALF DUMMY TRIM (ML2050)	9
CYLINDER / TURN-PIECE	10

LOCK HANDING IS CRITICAL TO ENSURE LOCK FUNCTIONS PROPERLY

DOOR PREPARATION:

TEMPLATE


FULL WORKING TRIM:	T31183
HALF WORKING TRIM:	T31184
FULL DUMMY TRIM:	T31186
HALF DUMMY TRIM:	T31187

ALL TEMPLATES CAN BE FOUND AT WWW.CORBINRUSSWIN.COM/Library/Templates

INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11

ASSA ABLOY

Mortise Lock Handing Instructions

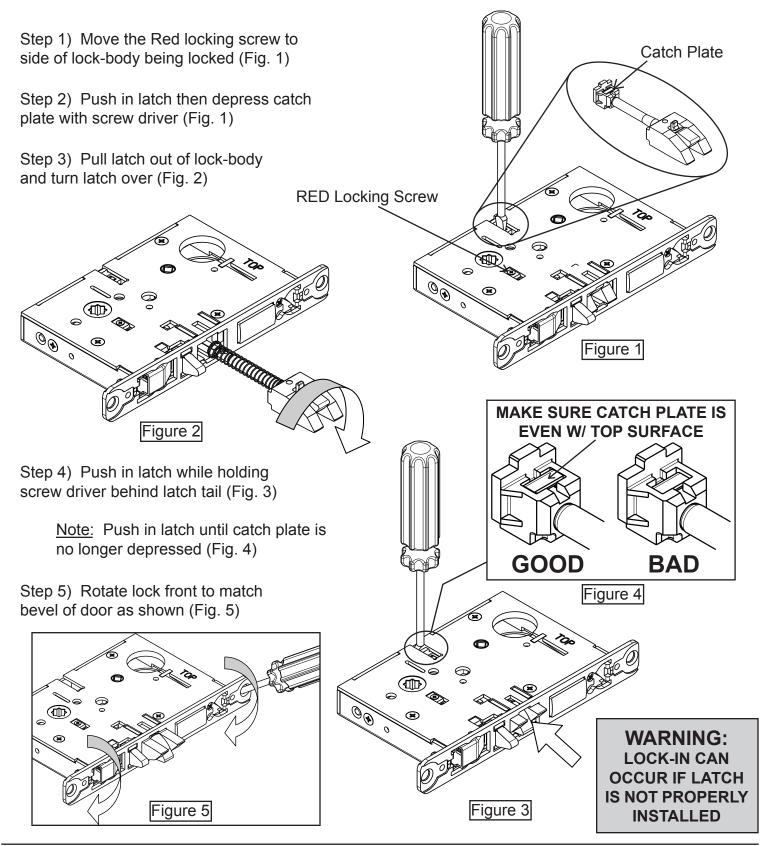


INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11

FULL TRIM (STD) INSTALLATION


D

ASSA ABLOY

Step 1) Install strike with shorter 3/4" mounting screws

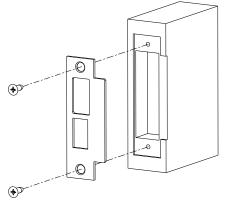



Step 2) Insert mortise lock into door and hand tighten longer 1" mounting screws

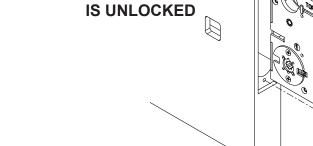

MAKE SURE LOCK


Step 3) Install spacer blocks on both sides of lock-body with 1/4" Fillister Head Screws

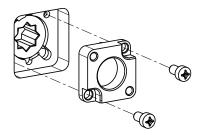

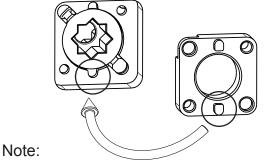


Align tabs on spacer with cutouts on lock-body

Step 4) Install adapter plates on both sides of door using 1/2" Flat Head Screws

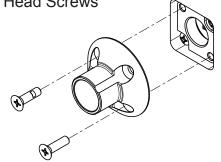



INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11 Russwin 2

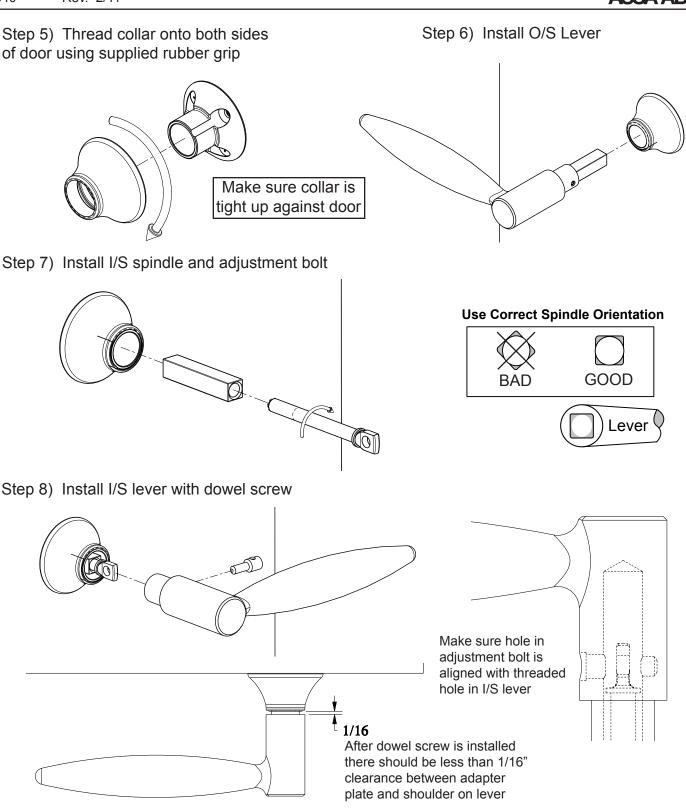


Step 9) Rotate both levers individually and make sure both levers return. If either lever binds, remove I/S lever and un-thread adjustment bolt 1/2 turn.


INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11



Step 10) If the lock function calls for a cylinder or turn-piece proceed to cylinder and turn-piece instructions on page 10. Otherwise proceed to next step

Step 11) Install scalp using 3/16" Flat Head Screws

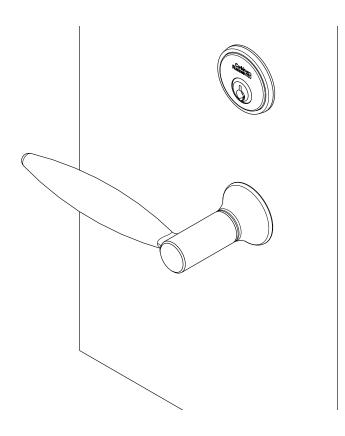



Ø

Ø.

Þ


T)

INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11


ASSA ABLOY

HALF TRIM (M30) INSTALLATION


Step 1) Install strike with shorter (3/4") mounting screws

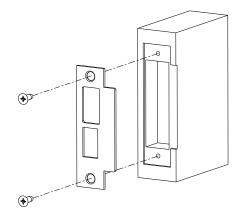


Step 3) Install spacer block on trim side of lock-body with 1/4" Fillister Head Screws

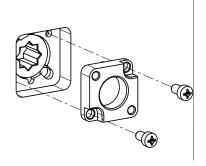


Step 4) Install adapter plate on trim side of door using 1/2" Flat Head Screws

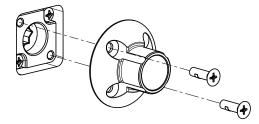


Step 2) Insert mortise lock into door and hand tighten longer (1") mounting screws

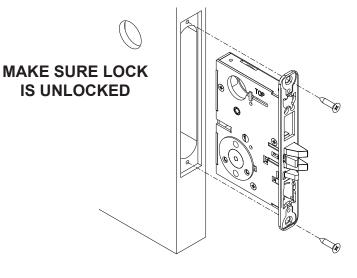

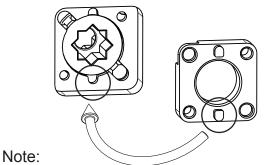


Align tabs on spacer with cutouts on lock-body

Step 5) Thread collar on trim side of door using supplied rubber grip

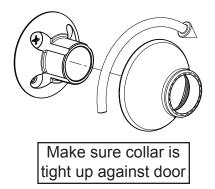


INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11

Step 6) Install I/S spindle and adjustment bolt

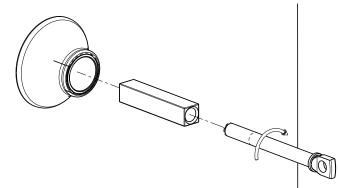


BAD GOOD

Use Correct Spindle Orientation



ASSA ABLOY


Step 7) Install I/S lever with dowel screw

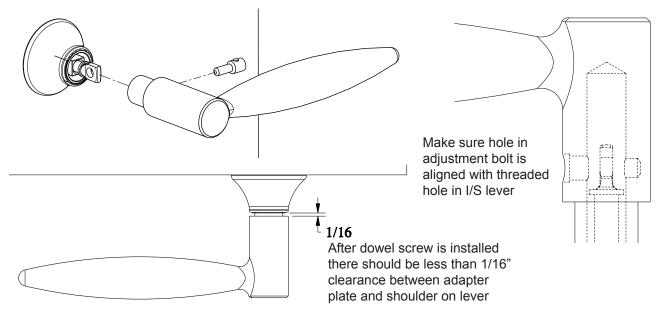

Step 8) Rotate both levers individually and make sure both levers return. If either lever binds, remove I/S lever and un-thread adjustment bolt 1/2 turn.

Step 10) If the lock function calls for a cylinder or turn-piece proceed to cylinder and turn-piece instructions on page 10. Otherwise proceed to next step

Step 11) Install scalp using 3/16" Flat Head Screws

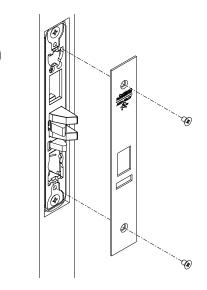


INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11


ASSA ABLOY


FULL DUMMY TRIM (ML2070) INSTALLATION

Step 1) Insert dummy spindle into both adapter plates




Step 2) Install adapter plate assemblies

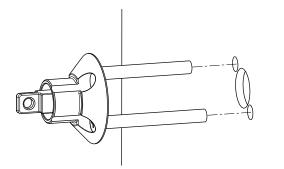


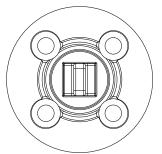


Make sure dummy spindle is aligned as shown

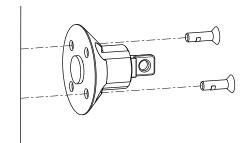


Step 3) Thread collar on both sides of door

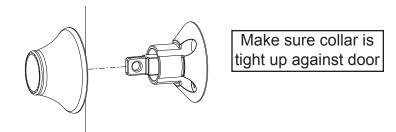

Step 4) Install lever on both sides of door with dowel screws

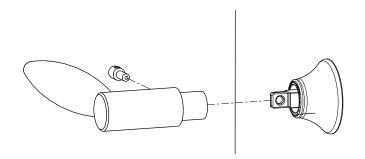

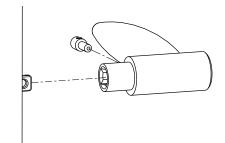



INSPIRE[™] Mortise Trim Instructions FM 340 Rev. 2/11

ASSA ABLOY

HALF DUMMY TRIM (ML2050) INSTALLATION


Step 1) Insert dummy spindle into adapter plate



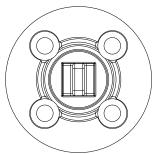


Make sure dummy spindle is aligned as shown


Step 2) Install adapter plate assemblies

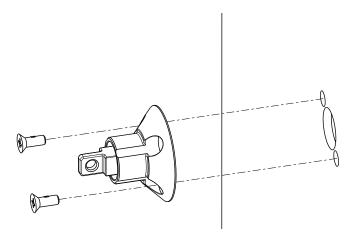



Step 3) Thread collar on trim side of door

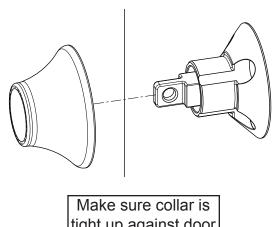

tight up against door

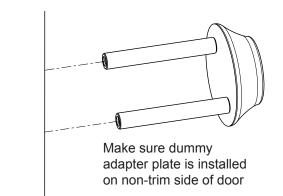




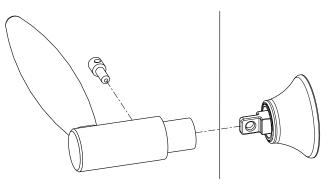

INSPIRETM Mortise Trim Instructions FM 340 Rev. 2/11

ASSA ABLOY

CYLINDER AND TURN-PIECE INSTALL

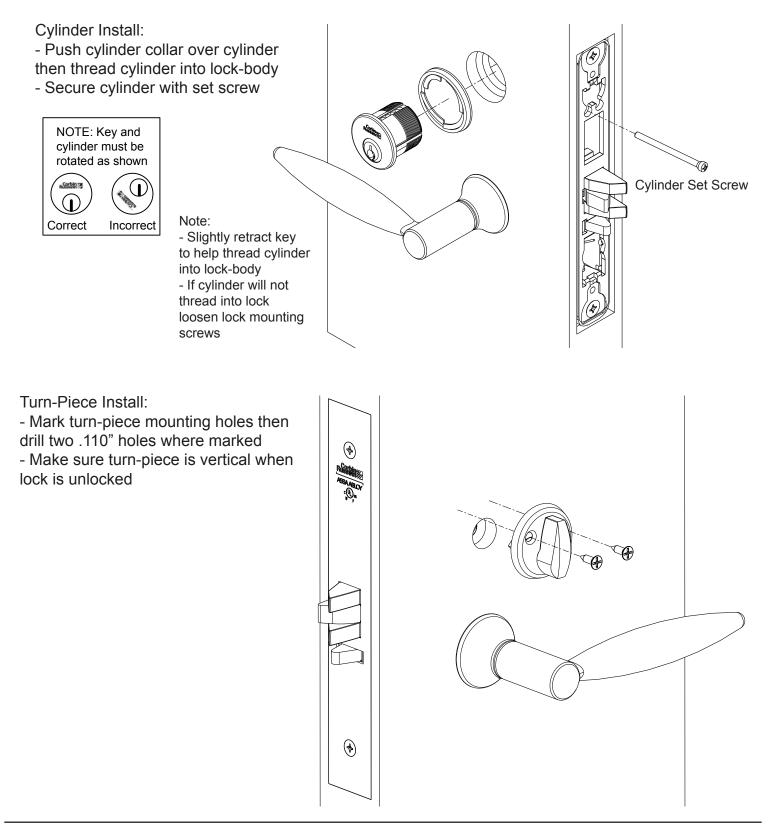

10